


Product Support

C6000 Passwords

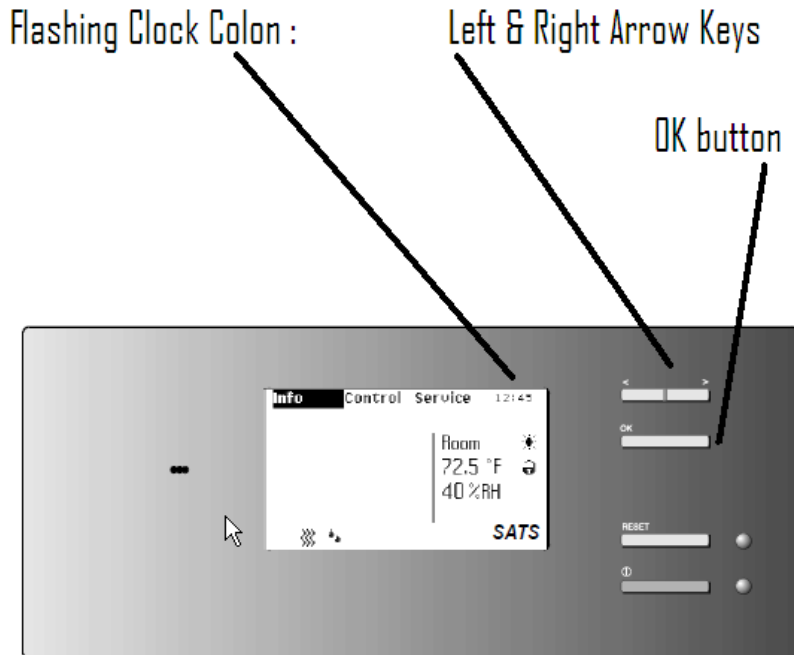

A password is required to access the Control and Service Menus

- 1) Familiarize yourself with the front display. Note the flashing clock colon, (:), between the hour and minute in the upper right of display.
- 2) The password for the "CONTROL" menu is press and release the LEFT arrow button, then the OK button and then the RIGHT arrow button. Press the buttons while the clock colon is visible (see #4)
- 3) The password for "SERVICE" menu is press and release the RIGHT arrow button, then the OK button and then the LEFT RIGHT arrow button. Press the buttons while the clock colon is visible (see #4)
- 4) Pressing the buttons is only part of the password; the password will only work if the buttons are pressed WHILE the flashing clock colon is visible. It is not necessary to press the buttons during the same flash (of the colon) or sequential flashes, just be sure to press the buttons while the colon is visible. The password WILL work, it cannot be changed and is the SAME for all C6000s. The colon blinks on and off on one second intervals; be patient as most people have to try a few times to get the "colon flash" timing down.